



VPM2-26 Mounting Configuration

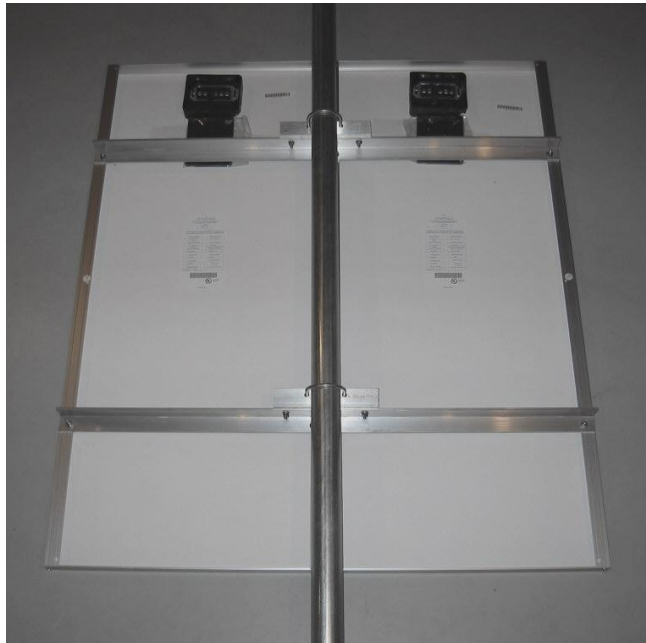

Detail A: Bolt Configuration

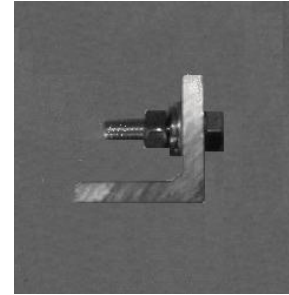

**Nut - Lock Washer - Washer - Al Angle
- Washer - Bolt**

Detail B: Pipe Clamp Configuration



**U-Bolt - Washer -
Lock Washer - Bolt**

Assembly Instructions:

1. Fasten the two 52" Al Angle parts to the solar modules.
2. Fasten the two 8" Al Angle part to each of the 52" Al Angle part from #1.
3. Fasten the solar module on a 2" Diameter pole with U-Bolts.

VPM2-26

Vertical Pole Mount for 2 x 26" Solar Panel



t. 1.866.258.0110
f. 866.437.5531
e. sales@hespv.ca
w. hespv.ca

Parts List:

- 2 x 52"L 1 1/2 x 1 1/2 x 1/4" Al Angle (6061 Aluminum)**
- 2 x 8"L 1 1/2 x 1 1/2 x 1/4" Al Angle (6061 Aluminum)**
- 12 x 1/4" Bolt, Nut, Washer (2), Lock Washer (Stainless Steel)**
- 2 x 2" U-Bolt with Nut, Washer, Lock Washer (Stainless Steel)**

CHECKED		DWG BY		DWG TITLE		REV
JMD		ATE		VPM2-26		2
SCALE		Not to scale	DATE	July 1, 2008	SHEET	1 of 1